ARAT Telephone mount

Type: FORD
Windstar 1996 - 2000

Part No: 1231

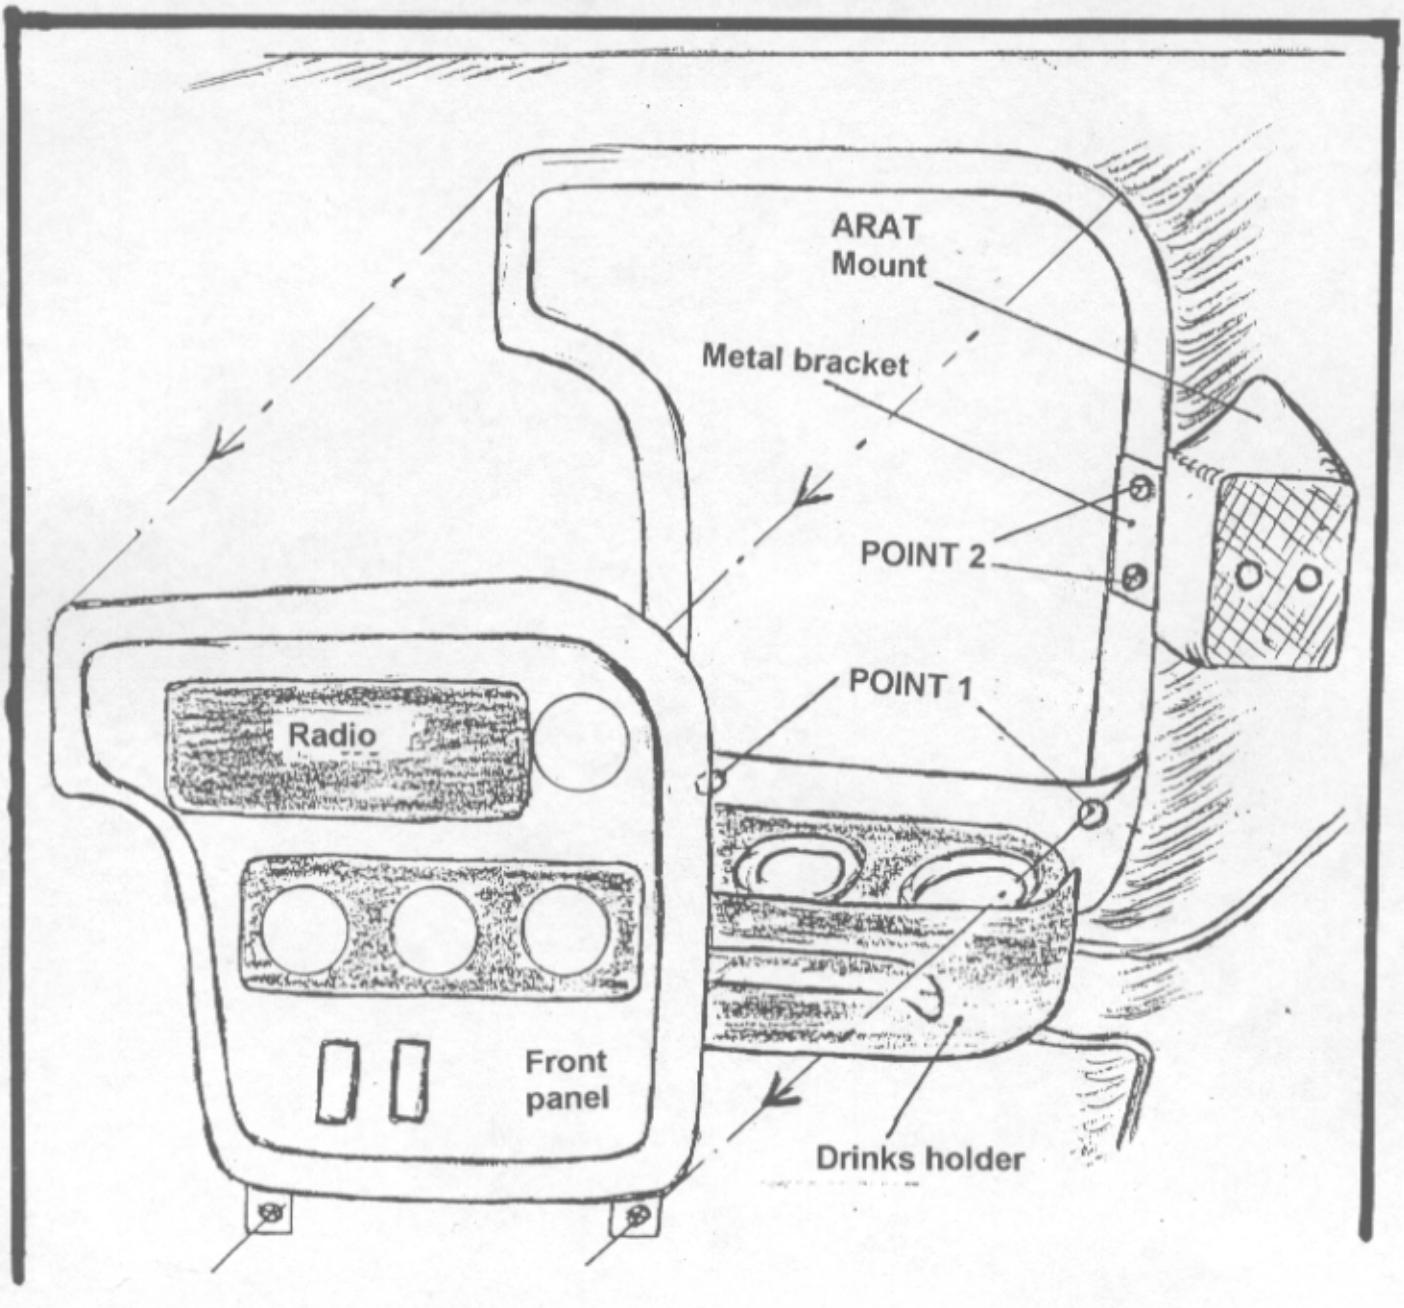

Installation instruction

1. Remove the radio from its housing, and remove the drinks holder from the dashboard
2. Remove both front panel securing screws at POINT 1, and remove the front panel
3. Remove the screws at POINT 2, and place the ARAT mount to the contours of the dashboard, secure the mount with the screws from POINT 2 through the metal brackets
4. Replace the front panel and radio